

## 2: Features

The SR-Lambda series earspeakers are advanced products of the SR- $\Lambda$  series that has continuously been improved for more than 18 years. For upgrading the electrostatic transducer, STAX improved not only the processing precision of the thin diaphragm that has had an established reputation but also the structure of the electrodes to receive the audio signal. As a result, STAX offers the earspeakers equipped with high quality transducers that are superior to others in sound clarity and excellent reproduction in detail at all levels.

## 2: 特長

SR-Lambda（ラムダ）シリーズは、20年余の歳月をかけて改良を重ねてきたSR- $\Lambda$ （ラムダ）シリーズからさらなる一歩を踏み出したモデルです。発音ユニットの見直しとして薄い振動膜の素材を従来モデルよりも吸湿性が小さく、かつ弾力性に富んだ新しい材料に全面変更しました。それにより従来モデルの持っていた微細レベルの再現性がさらに高まり、透過性の優れた発音ユニットが完成しました。

## 3: Using the Earspeaker


Before connecting your earspeaker, be certain that the adaptor or drive amplifier has been connected correctly according to its operation manual. Now, take the CABLE PLUG of the SR-Lambda making sure that the ridge is facing upwards. Insert the plug firmly into the 5-pin socket of your STAX adaptor or drive amplifier.

## 3: ご使用方法

コンデンサー型ヘッドフォンは通常のヘッドフォンジャックに直接つなぐのではなく、専用アンプやアダプタにプラグを差し込んで使います。コードプラグの凸印を上にして丁寧に奥まで差し込んでください。



**厳守**

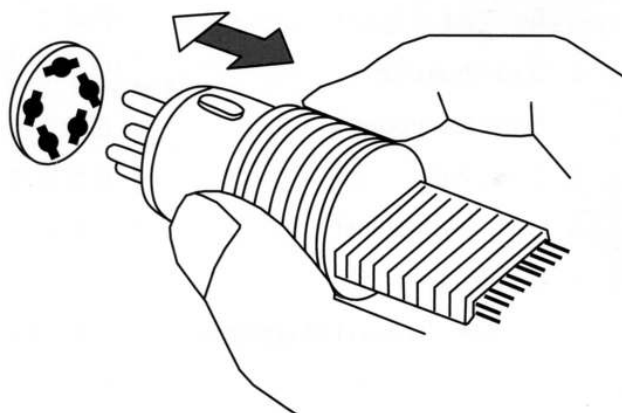

When unplugging, be sure to hold the plug, not the cord.

注意 コードの抜き着しは必ずプラグを持って行ってください。